

ECOTRIC PLUS I RTS TECHNIQUE MOTOR 24 V

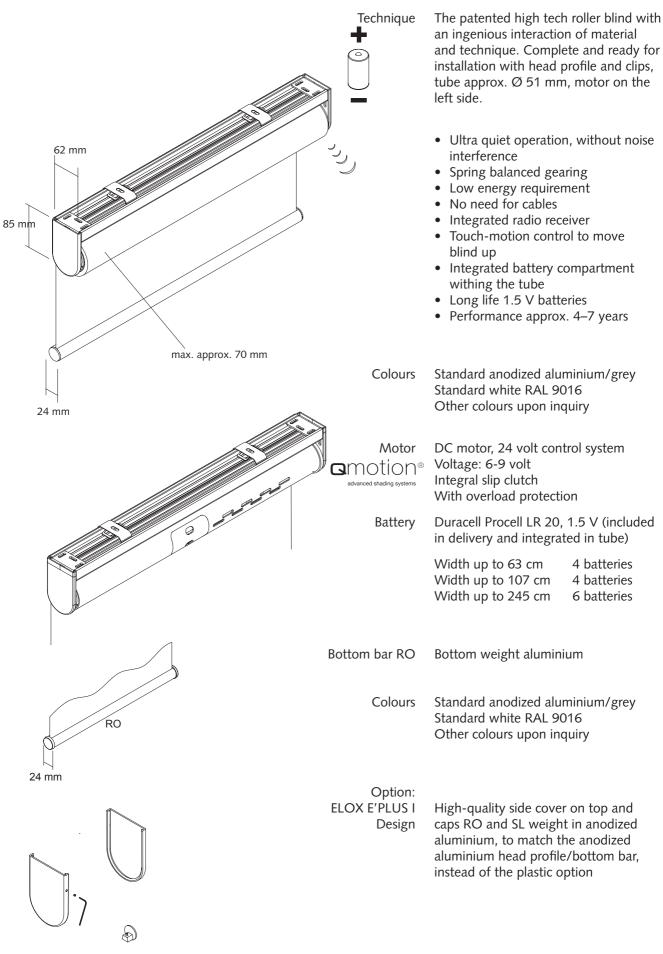



ECOTRIC PLUS I RTS TECHNIQUE MOTOR 24 V

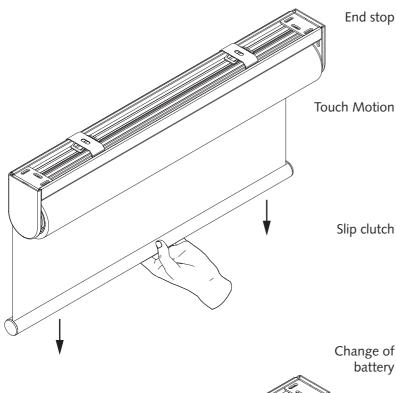



Limit switch preset for bottom at the works, individually adjustable top and bottom on site

Also operable without the remote control. The motor is activated by pulling lightly by hand on the bottom bar (approx. 5 cm) and the curtain then moves automatically upwards

If necessary, the blind can be slowly pulled down to the required position by hand on the bottom bar. Then use the touch motion function or the radio transmitter to roll it up automatically

Change of battery 1. Press the button DOWN until the roller blind stays at the lowest end position.

2. Pull briefly by hand on the bottom bar (approx. 10 cm) so that the roller blind lifts to the 75% position

3. Pull the curtain down by hand on the bottom bar until you can see the battery compartment

4. Take off the grey battery cap and replace the batteries, then replace the cap (lined up with the shaft)

5. Press the button UP and the roller blind lifts to the top position

Battery Replacement battery DURACELL PROCELL LR 20, 1.5 V MN 1300


Measures Max. width 245 cm Max. height 260 cm

Fabric reeling Standard backward reeling for fixation on ceiling or wall

Forward reeling on request only for fixation on ceiling possible

Fabric width Roller blind width – approx. 3.0 cm


O PROCEELL)

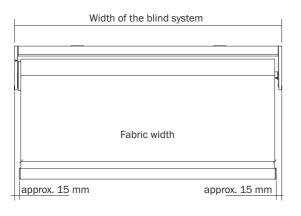



ECOTRIC PLUS I + II RTS CONTROL



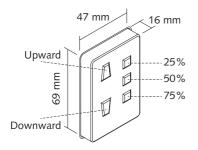


Radio Transmitter 1-channel

QMotion manual single channel radio transmitter 5 buttons for upwards, downwards and in-between stops at 25%, 50% and 75% of the height of the system

Magnetic back surface for wall

mounting (optional)

Colours white

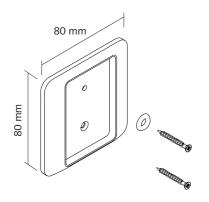


QMotion wall mounting, manual single channel radio transmitter

With integral magnet holder

Colours white

> Overall depth of wall mounting / manual radio transmitter: 22 mm

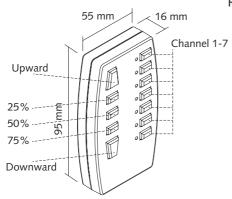

Radio Transmitter 7-channel QMotion manual 7 channel radio transmitter

5 buttons for upwards, downwards and in-between stops at 25%, 50% and 75% of the height of the system Up to 6 individual or group settings. Channel 7 controls all the roller blinds together, LED display for controlled

Magnetic back surface for wall

mounting (optional)

Colours white


QMotion wall mounting, 7-channel

radio transmitter

With integral magnet holder


Colours white

> Overall depth of wall mounting / manual radio transmitter: 24 mm

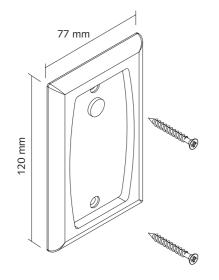

ECOTRIC PLUS I + II RTS **CONTROL**




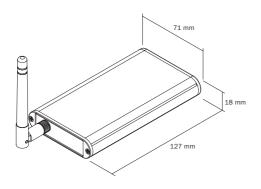


App Control QSync QMotion App and the QSync technology transforms a Smart-Phone or Tablet into the most elegant and functional transmitter for ECOTRIC PLUS I+II. Transmission range 10-15 m

Colours

grey

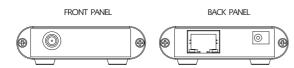

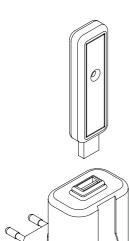

Signal amplifier **QRelay**

QRelay extends the capability by assisting signal transmission and reception when needed and is compatible with the radio transmitters.


Transmission range up to 10 m

Colours black



ECOTRIC PLUS I + II RTS INSTALLATION



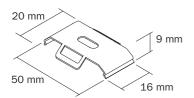

Clip Standard We supply the roller blinds fully assembled with the relevant clip installation arrangement approx. 4 to 6 cm from the end of the roller:

Up to 99 cm width: 2 pieces As of 100 cm up to 149 cm width: 3 pieces As of 150 cm up to 199 cm width: 4 pieces As of 200 cm up to 250 cm width: 5 pieces

Colours Standard nickel-plated

Standard white RAL 9016 Other colours upon inquiry

The clips shall be fixed straightended to the ceiling or the wall

Function clip

Fit the head profile with its rear side in the clips.

Then press the front of the roller blind upwards into the clips until it locks in



Groove/clip

Installation of the roller blind into the groove

